

LED WATCH INSTRUCTIONS MANUAL

Function: time

 
- X1 Hour (Each red light means one hour)
- X5 Minute (Each yellow light means 5 minutes)
- X1 Minute (Each red light means one hour)
- yellow light + green light = current minutes

Function: date

- Month Digits on the red light means months
- + ■ Date Digit on yellow light and digit on Green light is the day
- The moving yellow light means current date


Function: week

- Week digit on read light means week
- The moving green light mean the current week



On/off LED

 Press Set for 3 seconds to turn on or turn off LED



The time is 11:23



The date is aug 19



It is Sunday

12H P11

Set Time

24H to set 23:00



Press A set to set your hour

Press MODE to enter into the hour setting, the hour will flash. Press SET to set your hour and press MODE to enter into the minutes setting, the minutes will flash, press SET to set your minutes.

Set Date



Press mode to enter into month setting, the month will flash. Press set to set your month, and press mode to enter into date setting, the date will flash. Press set to set your date.

Set Week



Press mode to enter into week setting, the week will flash. Press set to set your week. Note: the digits on red light such as 1,2,3... means monday, tuesday, wed....

Bright degree



There are four levels of brightness. Red light means 1 level

Press mode to enter into brightness level setting, the green light will flash. And press set to set your desired brightness. Note: the digit 1,2,3,4 on green light stands for the level of brightness. The bigger the number is, the more bright it is.

Automatically display



Press MODE to enter into auto back light per 5 minutes setting. Digit 60 on the yellow light will flash. Press SET to open it while yellow light will keep open. When the yellow light flashing, this function is closed.



8:38



8:38

This product has two display, Its function and way with this The book.

Battery

This watch uses 2 X R2032 Lithium watch battery. Life expectancy can vary depending how often the button is pressed each day. It is calculated to last approximately 1 year if the time is displayed an average of 15 times a day. Dim lights indicate your batteries need replacing.

Warranty

The warranty covers one full year free from manufacturers defect. This does not include:
 ● Water damage.
 ● Broken Glass.
 ● Damage due to abuse or carelessness.
 For warranty issues please contact the store where you bought the watch.