

IMP 1071; IMP 1076; IMP 1077 models with built in FM Radio

Radio Instructions

Your item is supplied with the batteries fitted and has been checked prior to despatch

The radio uses 2x AAA batteries; these can be replaced by undoing the small cross head screw and removing the battery cover.

IMP 1071/R. The battery cover is located at the front of the trailer.

IMP 1076/R. The battery cover is located at the rear of the sidecar unit

IMP 1077/R. The battery cover is located on the underside of the bike.

The battery cover will only fit one way and the spring terminal on the battery cover should press against the **negative (-)** terminal of one battery, the other battery should be inserted the opposite way round (with the **positive (+)** nipple showing)

Replace the battery cover and tighten the screw.

Radio Controls

On/Off and Volume Control. Rotate this knob clockwise to turn the radio on and increase the volume. Rotate counter clockwise until a click is felt, the radio is now turned off.

Important: When the radio is not in use, ensure that this switch is *clicked off* to save battery power.

Switch R. This is the 'reset' function button. By pressing this button, the radio will be returned to the lowest end of the FM frequency band.

Switch S. This is the 'scan' function button. By pressing this button, the radio will scan for a station signal. When the radio finds a strong signal it will lock on to it. To move on to the next station, press the '**S**' button again. Carry on doing this until the desired station is reached. If you reach the end of the frequency without finding a suitable station, alter the direction of the aerial, press the '**R**' button to reset to the lowest end of the waveband, followed by the '**S**' button to start searching again.