

# LED WATCH INSTRUCTION MANUAL

电池: 使用两顆型号CR2032的纽扣电池, 当表的亮度变暗时, 请更换新的电池

功能: 表具有72顆高亮LED, 显示时间和日期。  
具有15分钟自动显示一次动画和时间的功能, 具有亮度调节功能。

读时间: 按动突出的按键A一次显示时间; 按动突出的A键两次显示日期。  
如何看时间: 表有六个纵列, 最左边第一纵列代表[时], 由下往上计算1-12时, 左边并有数字标示; 而右边五个纵列代表[分], 由下往上累计1-60分, 时间的对照如图所示。  
如何看日期: 表有六个纵列, 最左边第一纵列代表[月], 由下往上计算1-12时, 左边并有数字标示; 而右边五个纵列代表[日], 由下往上累计, 如图示。

如何设定时间: 右边表侧有两个操控按钮, 突出的边控制按钮, 隐藏的为设定钮, 要显示时间按控制按钮即可, 隐藏式钮为功能设定专用, 更特殊的是每隔15分钟会再自动显示动画! 突如其来地炫耀! 迷人的目光永远指向您。

手表设置: 1) 按动B键, 显示当前时间, 再次按动B键, 手表左边一列(代表时)将闪烁, 这时按A键一次将增加一小时, 右上角显示字母A代表上午或显示P代表下午。2) 按动B键, 手表右边五列(代表分钟)将闪烁, 这时按A键一次将增加一分钟。(当前小时为整小时, 即分钟为零, 将看不见月份。)3) 按动B键, 手表左边一列(代表月)将闪烁, 这时按A键一次将增加一个月, 右上角字母显示D代表日期。4) 按动B键, 手表左边五列(代表日)将闪烁, 这时按A键一次将增加一日, 右上角显示字母D代表日期, (根据设置的月不同, 日将在30 31 29之间自动调整)5) 按动B键, 手表将显示(L 5), 代表当前的亮度等级, 按动A键, 亮度等级将在1-7之间循环, 亮度同时自动变化。6) 按动B键, 手表将显示(NO)代表不启动自动显示时间和动画功能, 显示OK代表启动每15分钟显示时间和动画功能, 按动A键可切换(NO)和(OK)7) 按动B键, 退出功能设置状态。

A버튼: 시간/날짜 전환버튼(설정시 값일 수정)  
B버튼: 설정모드 전환버튼

\*시간/날짜 보는데  
A버튼 1회 누르면 시간, 2회 누르면 날짜를 표시  
-날짜 연현시 상면에 D가 나타남  
-첫번째줄 시간/월을 표시  
두번째줄~여섯번째줄 분/일을 표시

\*설정모드  
B버튼을 누른후 A버튼을 이용하여 조절한다.  
B버튼 1회: 시간 조절  
2회: 분 조절  
3회: 월 조절  
4회: 일 조절  
5회: LED 밝기 조절(1~7)  
6회: 자동절멸 조정(OK/NO)

Power: insert two CR2032 batteries to power the device. Change the batteries when the luminosity is too weak.

Features: It has 72 super bright LED lights that display the time as well as the month and date. It can light up automatically every 15 minutes and can adjust bright degree.

 
 
Read time: Press button A once for time, press button A twice for month and date.

Set WATCH: 1) Press button B and on the top right corner will display a(A) for AM or (P) for PM. The left column (Hour) will flash and you can press button A to move the hours along to set AM or PM. 2) Press button B again and the minutes will flash, press button A to set the minutes 3) Press but on A again and a (D) will display at the top right corner. This represents the date. The left column displays at the months from 1 to 12. 1 being January and 12 being December. 4) Press button B again and the (D) is still displayed but the date will flash. Press button A to set the date. Depending on the month you select the date will adjust automatically. But it will not adjust on Feb 28th a leap year. Once every 4 years 5) Press button B again, the top right corner will display "L" and the left bottom will display a number. The "L" means the luminosity, the number means the bright degree. The number is bigger, the luminosity is brighter. Continuously press button A to choose luminosity. 6) Press button B again and a "NO" or "OK" will display. "NO" means the light up feature won't automatically display every 15 minutes. "OK" means the light up feature will automatically display every 15 minutes. Press button A to choose "OK" or "NO". 7) Press button B again to turn off the time setting mode.

Function:  
time





Function:  
date

To set the time and the date

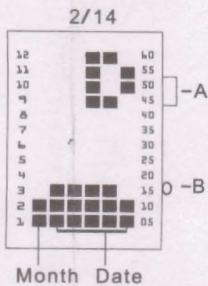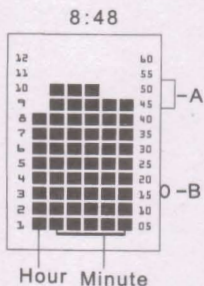

Set the time

    Set the date

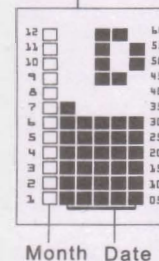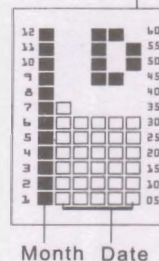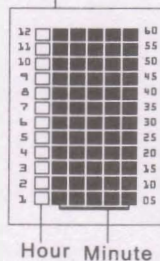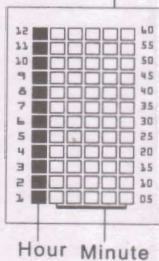

Time: 时间

Date: 日期

Hour: 小时

Minute: 分钟

Month: 月